

Game/Camera/Headphones
Jeux/Caméra/Casque
Juegos/Cámara/Auriculares

Composite Audio / Video (SIDE)
Audio/Video composite (LATERAL)
Audio/Video compuesto (LADO)

Game/Camera
Juegos/Caméra
Juegos/Cámara

OR / OU / O

S-VIDEO (Y/C)
S-VIDEO
S-VIDEO

Game/Camera
Juegos/Caméra
Juegos/Cámara

OR / OU / O

HDMI

TV

OR / OU / O

Headphones
Casque
Auriculares

TV

High Definition devices
Périphériques HD
Dispositivos HD

HDTV Receiver/HD DVD
Receiver/HD TV/HD DVD
Receptor de HDTV/HD DVD

Component Video Input (CVI)
Entrée vidéo composant
Entrada de video componente

TV

OR / OU / O

HDMI

TV

OR / OU / O

VCR
Magnétoscope
VCR

Composite Audio / Video (SIDE)
Audio/Video composite (LATERAL)
Audio/Video compuesto (LADO)

VCR
Magnétoscope
VCR

OR / OU / O

S-VIDEO (Y/C)
S-VIDEO
S-VIDEO

VCR
Magnétoscope
VCR

OR / OU / O

Cable management
Gestion des câbles
Manejo del cable

A

B

C

D

Home theater system
Système de cinéma à domicile
Sistema Home theatre

Component Video Input (CVI)
Entrée vidéo composant
Entrada de video componente

OR / OU / O

HDMI

TV

OR / OU / O

Quick Start Guide

Guide de démarrage rapide

Guía de inicio rápida

1 Setup
Configuration
Configuración

2 Connect
Connectez
Conecte

Welcome to Philips!
Register your product and get support at
www.philips.com/welcome

PHILIPS

2005 © Koninklijke Philips Electronics N.V. All rights reserved.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

Spécifications are subject to change without notice.

www.philips.com

M6 (18mm) x 4
x 2

R03 / AAA
(1.5V) x 2

SD111HD

1 Setup

Configuration

Configuración

Assemble
Assemblez
Ensamblaje

A

B

C

Basic connections
Connexion de base
Conexión básica

Power cord
Cordon d'alimentation
Cable de suministro eléctrico

Antenna / Cable
Antenne / Cable
Antena/Cable

Cable
Câble
Cable

Locating the TV connectors
Emplacement des prises du téléviseur
Ubicación de los conectores del TV

HDMI 2

HDMI 1

AV1

AV2

AV3

AV4

AV5

AV6

AV7

AV8

AV9

AV10

AV11

AV12

AV13

AV14

AV15

AV16

AV17

AV18

AV19

AV20

AV21

AV22

AV23

AV24

AV25

AV26

AV27

AV28

AV29

AV30

AV31

AV32

AV33

AV34

AV35

AV36

AV37

AV38

AV39

AV40

AV41

AV42

AV43

AV44

AV45

AV46

AV47

AV48

AV49

AV50

AV51

AV52

AV53

AV54

AV55

AV56

AV57

AV58

AV59

AV60

AV61

AV62

AV63

AV64

AV65

AV66

AV67

AV68

AV69

AV70

AV71

AV72

AV73

AV74

AV75

AV76

AV77

AV78

AV79

AV80

AV81

AV82

AV83

AV84

AV85

AV86

AV87

AV88

AV89

AV90

AV91

AV92

AV93

AV94

AV95

AV96

AV97

AV98

AV99

AV100

2 Connect

Connectez

Conecte

Cable box or set top box
Boîtier décodeur
Caja de cable o caja superior de ajuste

OR / OU / O

OR / OU / O

OR / OU / O

OR / OU / O

DVD player or recorder
Lecteur ou enregistreur de DVD
Reproductor o grabador de DVD

OR / OU / O

OR / OU / O

OR / OU / O

Personal computer
Ordinateur personnel
Computadora personal